

WeeRide

For the Family on the Go



INSTRUCTION MANUAL FOR CENTER MOUNT CHILD CARRIER (FOR CHILDREN UP TO 40LBS. - 18KG)



PLEASE READ THIS MANUAL.
The information provided is fundamental to
your safety and the safety of your child.

TABLE OF CONTENTS

WARNINGS/CAUTIONS	1
NOTICE/TIPS	2
ASSEMBLY INSTRUCTIONS	3
SECURING CHILD IN CARRIER	7
CARE & MAINTENANCE	7
PARTS LIST	8
WARRANTY	9

WARNINGS, CAUTIONS, NOTICES and TIPS WHEN USING YOUR BICYCLE CHILD CARRIER


WARNING

1. This child carrier is designed to carry children that weigh up to 40 lbs. – 18 kg. **DO NOT** carry a child that weighs more than this weight.
2. The rider and the child being carried should wear helmets that meet U.S. Consumer Product Safety Commission standards for bike helmets.
3. **DO NOT** carry a child, who is less than 12 months of age, in this child carrier. To be a passenger, the child must be able to sit up straight with the head held upright while wearing a bicycle helmet. A doctor should be consulted about any child who is of questionable developmental age.
4. **DO NOT** install this carrier on a racing style bicycle (drop handlebar).
5. **DO NOT** make any modifications to this child carrier.
6. **DO NOT** permit any part of the child's body or clothing, shoelaces etc. to come in contact with moving parts of the bicycle.
7. **DO NOT** permit the child to carry refreshments, food or toys while riding in the child carrier. These items may distract the cyclist and if thrown by the child they may cause loss of control of the bicycle.
8. **ALWAYS** attach the security harness snugly around the child.
9. **DO NOT** leave the child unattended in the child carrier.
10. **DO NOT** leave the child in the child carrier when the bicycle is supported only by the kickstand.
11. **DO NOT RIDE YOUR BIKE AT NIGHT OR DURING PERIODS OF LOW VISIBILITY - YOU COULD BE HIT BY A MOVING VEHICLE. DO NOT RIDE IN WET OR INCLIMATE WEATHER.**

CAUTION

1. Avoid riding in inclement or hazardous conditions, including temperatures below freezing that could cause the child to suffer frostbite.
2. Additional luggage or accessories should not be attached to the bicycle child carrier. If additional loads are to be carried on the bicycle they should be placed only in carriers designed specifically for that purpose.
3. When the child carrier is not in use, fasten the waist buckle of the security harness to prevent the straps from dangling or presenting a hazard to the cyclist.
4. Before each ride, ensure that the mounted child carrier does not interfere with the cyclist's ability to brake, pedal or steer the bicycle.
5. Care is to be taken to ensure that the seat is not connected to bicycle mounting points that could deform under load and affect the structural integrity of the bicycle.

ALWAYS WEAR A HELMET - IT COULD SAVE YOUR LIFE!

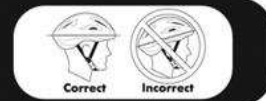

1

NOTICE

1. Any load added to a bicycle will lessen the stability of the bicycle and alter its riding characteristics. Do not attempt to carry a load that is heavier than you can readily control. Match the load to your weight, strength and size.
2. Keep this Instruction Manual handy for reference when moving the bicycle child carrier to another bicycle or doing maintenance or making adjustments to the bicycle.
3. The bicycle, to which the child carrier is attached, must be in good working order, of a type appropriate for the additional load and of a proper size and adjustment for the rider. The cyclist should consult the information supplied with the bicycle or obtain information from the manufacturer or supplier of the bicycle to determine how to make the necessary adjustments. A properly sized and adjusted bicycle will improve both the comfort and safety of the ride.
4. Before each use, check to determine that all fasteners are in place and secure. Check them frequently and ensure that they have not loosened due to vibration.
5. Always remove the child carrier from the bicycle when the bicycle is being transported on a motor vehicle. This is necessary because the force of the high wind, on the child carrier, may degrade or damage the carrier to the point where it may not perform reliably. This carrier has been designed for easy and rapid removal from the support bar assembly. When reattaching the child carrier, check all fasteners and tighten as required.

TIPS


1. Carry extra clothing for your child, such as a windbreaker, sweater etc. You are active while cycling; the child is inactive and may feel cooler than you do.
2. Carry an air pump and repair kit, complete with all necessary tools, to repair a tire or tighten nuts, bolts etc.
3. Young children are very sensitive to the UV rays from the sun. You can reduce the damaging effects of the sun's UV rays by wearing appropriate clothing, applying sunscreen lotions and wearing UV protective sunglasses.

ATTENTION

The responsible cyclist is the most important safety factor in the safe use of a bicycle child carrier. You are responsible for the safety and security of your child. Maintain awareness of road and riding conditions at all times. Be attentive to the needs of the child. Check your bicycle and child carrier frequently to confirm that they are in safe operating condition and that all component parts are securely fastened.

2

ASSEMBLY INSTRUCTIONS

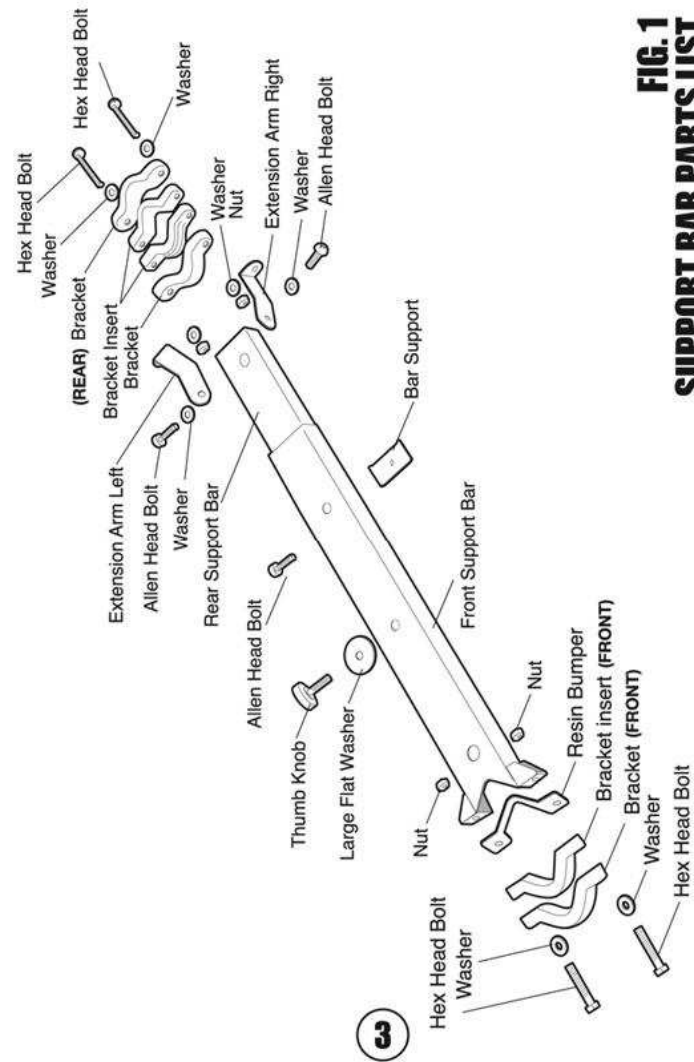

MOUNTING THE CHILD CARRIER TO THE BIKE

WARNING! Failure to comply with these manufacturer's instructions can lead to serious injury of the passenger or rider.

TOOLS REQUIRED: Phillips Screwdriver, Adjustable Wrench and Allen Wrench 5mm.

STEP 1

Lay out parts and remove all packing materials.

STEP 2

The front and rear sections of the mounting bar are held together by a hex bolt which screws into a bar support underneath the mounting bar. Using an Allen wrench, remove the hex bolt and bar support. Set these two small parts aside for now. Follow instructions for attaching the rear and front mounting bar pieces in STEP 3 below. The rear and front mounting bar pieces are then re-attached at the end of STEP 3.

STEP 3

The mounting hardware has been preassembled to the support bar for your convenience.


- a. Remove the rear bracket and bracket insert from the support bar assembly.
- b. Attach the support bar to the seat post between the frame and the bike seat. Reinstall the rear bracket and bracket insert as shown in FIG. A.
- c. Remove the front bracket and bracket insert from the support bar assembly.
- d. **DO NOT ATTACH THE SUPPORT BAR DIRECTLY TO THE HANDLEBAR STEM.** Attach the support bar to the head tube just **BELOW** the handlebar stem. Reinstall the hardware and bracket/bracket insert as shown in FIG. B.

NOTE: Make sure resin bumper is in place between the support bar and the headtube. This is to protect the finish of your bicycle.


- e. You can now connect both rear and front pieces of the support bar back together. Using the two small parts put aside in STEP 2 above, fasten both bar pieces with the hex bolt and bar support. Adjust bar assembly to fit snugly across the bicycle. Securely fasten completed bar assembly with an Allen wrench.

4

FIG. 4

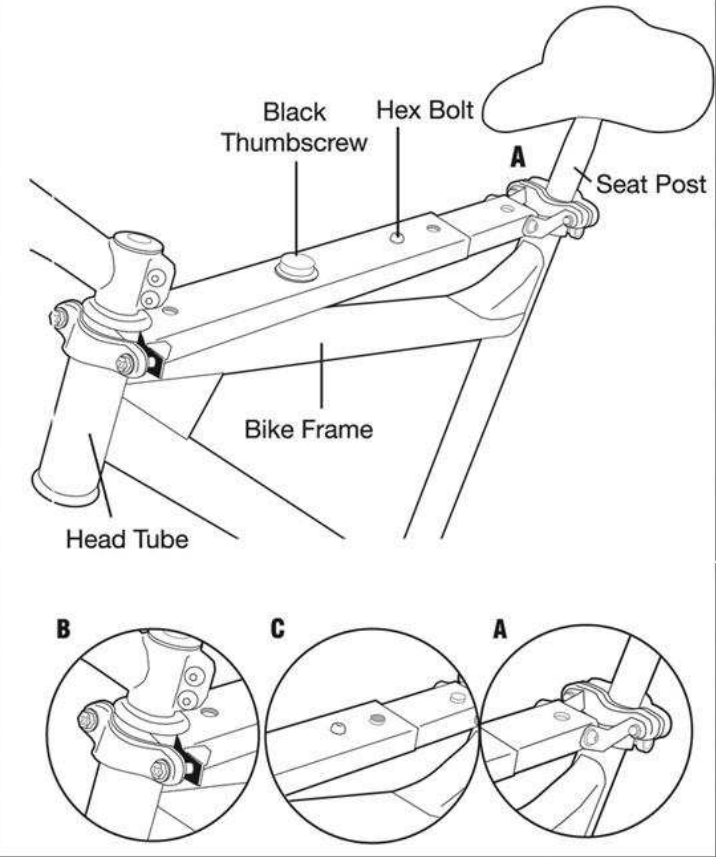

5

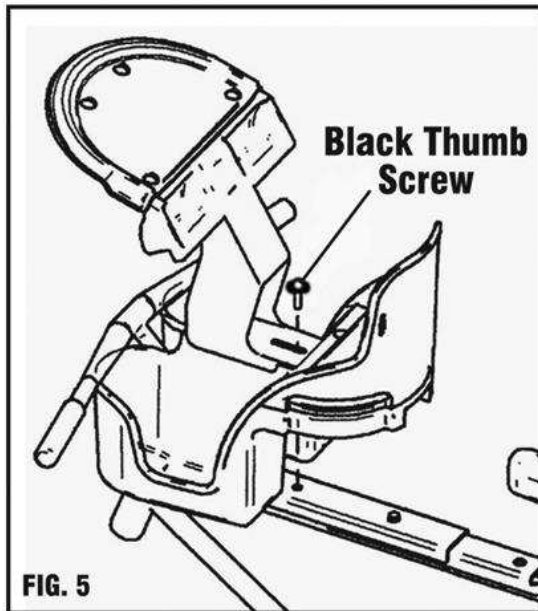

STEP 4

Now place the child carrier on the support bar and attach using the thumb screw. The seat can slide back and forth to your preference.

NOTE: Position carrier as far forward as possible while ensuring that the handlebar can be rotated approximately 30 degrees in either direction (i.e.: so that the front wheel can be turned to the 11 o'clock and 1 o'clock positions) without contacting any portion of the child carrier. It may be necessary to slide the carrier back slightly to achieve this rotation.

Once you have found the desired position, tighten the thumbscrew. Make sure all of the bolts and screws are carefully tightened before using the child carrier. FIG. 5.

NOTE: When you want to ride your bike without the child carrier, remove the child seat by loosening the thumb screw. It is not necessary to remove the support bars.

6

SECURING CHILD IN CHILD CARRIER

BEFORE YOU RIDE THE BIKE

The bicycle should be tested and the controls checked for proper function before a child is placed in the child carrier. Take the bicycle for a test ride **WITHOUT** a child in the carrier. Confirm that the bicycle child carrier does not interfere with the safe operation of the bicycle. Make any necessary adjustments to the bicycle before taking your child for the first ride.

Before you take your child for the first ride in the bicycle child carrier, you may wish to try the child carrier and adjust the security harness for a comfortable fit. Place the child in the carrier with the child's feet in the foot support enclosures. Position the shoulder straps on the child's shoulders, with the straps close to the child's neck, and position the shoulder tension strap in the upper shoulder area, to keep the shoulder straps from sliding off the child's shoulder. Adjust straps until they are comfortably snug when the child is sitting upright.



WARNING! Make certain your child is securely buckled into the security harness before riding the bike.


WARNING! Never leave your child in the child carrier with the bicycle supported only by the kickstand or leaning against a support!

CARE AND MAINTENANCE

The support bars have been treated with a durable, rust resistant, anti-corrosive finish, which can be cleaned with a soft cloth to remove dirt and finger prints. The plastic components of the carrier can be cleaned with soap and water. The fabric covered, foam cushions cannot be readily removed for cleaning but can be spot cleaned by wiping with a cloth dampened in a soap solution.

7

CENTER MOUNT SEAT PARTS LIST

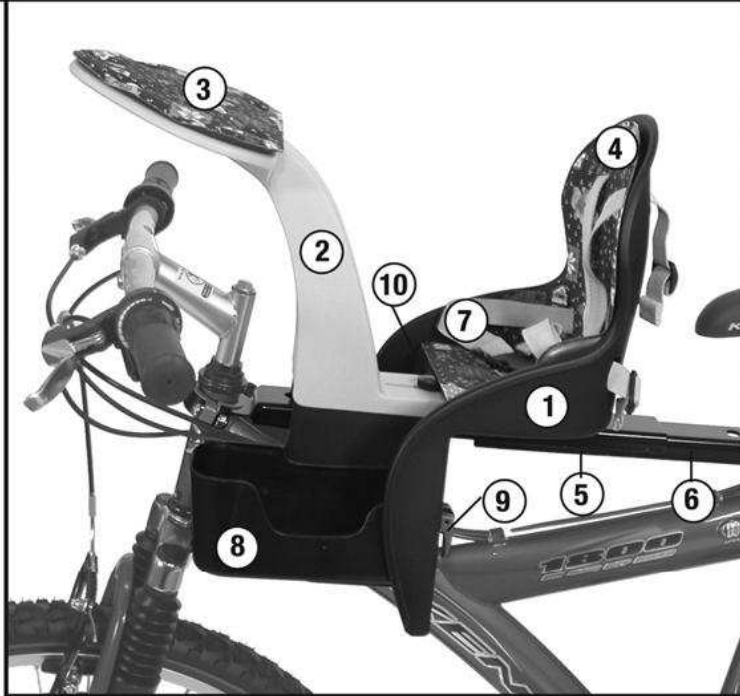

- | | |
|----------------------|-------------------------|
| 1. Seat | 6. Rear Support Bar |
| 2. Pedestal | 7. Security Harness |
| 3. Pedestal Cushion | 8. Adjustable Foot Rest |
| 4. Seat Cushion | 9. Adjust Lever |
| 5. Front Support Bar | 10. Thumb Knob |

Note: See Support Bar Parts List for description of hardware.



For Service In The USA,
call Kent International toll free:
1-800-451-5368
Tel: (973) 434-8180 Fax: (973) 434-8189
or email to: weeride@kentbicycles.com

8

WARRANTY STATEMENT

LIMITED WARRANTY

All components of your WeeRide bicycle child carrier are warranted against defects in materials and workmanship for a period of two (2) years from the date of purchase. Kent International warrants only the original purchaser-consumer of this product, that such products and parts thereof, when used for normal riding purposes by a person that properly fits and is capable of riding a bicycle with this product installed, is free of defects in workmanship and material. This warranty does not apply to any part thereof which may fail due to improper assembly, accident, abuse, neglect or normal wear and tear.

This warranty is limited solely to defects in materials and workmanship. Our warranties do not apply to any unit that has been abused, misused, altered by component parts, substitutions, or used for rental or other commercial uses. Labor charges incurred in the replacement of parts are not covered by this warranty.

In no event shall Kent International, Inc. be liable for any direct, indirect, incidental or consequential damages resulting from the use of this product. This warranty is in lieu of all other warranties, express or implied, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose. This warranty gives you specific legal rights. You may have other rights that vary from province to province or from state to state. All warranty claims are to be made to:

Kent International, Inc.
Parts Department
60 E. Halsey Road
Parsippany, NJ 07054
For quick service call toll free 1-800-451-KENT between the hours of 8 and 4 pm EST.



For Service In The USA,
call Kent International toll free:
1-800-451-5368
Tel: (973) 434-8180 Fax: (973) 434-8189
or email to: weeride@kentbicycles.com